

# HYDRATILT TRUCK

## PREVENTATIVE MAINTENANCE

### DAILY

- Running lights, brake lights, and turn signals
- Reflectors / conspicuity tape
- Tire pressure
- Condition of tires
- Condition of wheels
- Wheel nuts
- Oil in axle hubs
- Brakes working properly
- Electric and air connections
- Landing gear
- Mud flaps
- Floor
- Winch cable
- Frame & cross members

### WEEKLY

- Lubricate tail hinge points  
\*use GL2 marine based grease

### MONTHLY

- Grease all zerks to include:\*\*  
Cylinder pins on H-lock, fold lock, fold linkage and tail
- Inspect cylinders for leaks
- Inspect all wiring, air lines & hydraulic lines
- Check winch cable
- Inspect bed structure
- Condition of tires
- Inspect floor of bed



1. Check wheels for hub oil
2. Grease H-lock assembly\*\*
3. Apply lubrication to fold linkage assembly hinges
4. Grease main deck lift\*\*
5. Change hydraulic oil filters twice a year & oil at least once a year

\*\*Using GL2 grade grease



3300 Waco Street, Texarkana, TX 75501  
888-LEDWELL | 903.838.6531  
ledwell.com | service@ledwell.com

Not just well made. **LEDWELL MADE.**

