HYDRATILT TRAILER

PREVENTATIVE MAINTENANCE

DAILY

Running lights, brake lights, and turn signals Reflectors / conspicuity tape Tire pressure Condition of tires Condition of wheels Wheel nuts Oil in axle hubs Brakes working properly Electric and air connections Landing gear Mud flaps Floor Winch cable

WEEKLY

Lubricate tail and deck hinge points

MONTHLY

| \Box | Grease all zerks to include:** |
|--------|---|
| | Cylinder pins on H-lock, fold lock, fold |
| | linkage and tail |
| | Inspect cylinders for leaks |
| | Inspect all wiring, air lines & hydraulic lines |
| | Check winch cable |
| | Inspect trailer structure |
| | Condition of tires |
| | Inspect floor of trailer |



1. Grease mini-deck lift & lock assembly**

Frame & cross members

- 2. Check wheels for hub oil and grease slack adjusters
- 3. Grease H-lock assembly**
- 4. Apply lubrication to fold linkage assembly hinges

**Using GL2 grade grease





