

# ROLLBACK

## PREVENTATIVE MAINTENANCE

### DAILY


- Running lights, brake lights, and turn signals
- Reflectors / conspicuity tape
- Tire pressure
- Condition of tires
- Condition of wheels
- Inspect all wheel nuts
- Brakes working properly
- Electrical, air and hydraulic connections
- Mud flaps
- Floor of Bed
- Winch cable
- Structure

### WEEKLY

- Apply grease to main runners of bed
- Grease all cylinder pins
- Grease pivot blocks \*use GL2 marine based grease

### MONTHLY

- Inspect hydraulic oil for dirt/water
- Inspect winch cable for fraying/bends
- Inspect Power Take Off for leaking
- Inspect slide pads for wear  
(should fit snug in main rail)

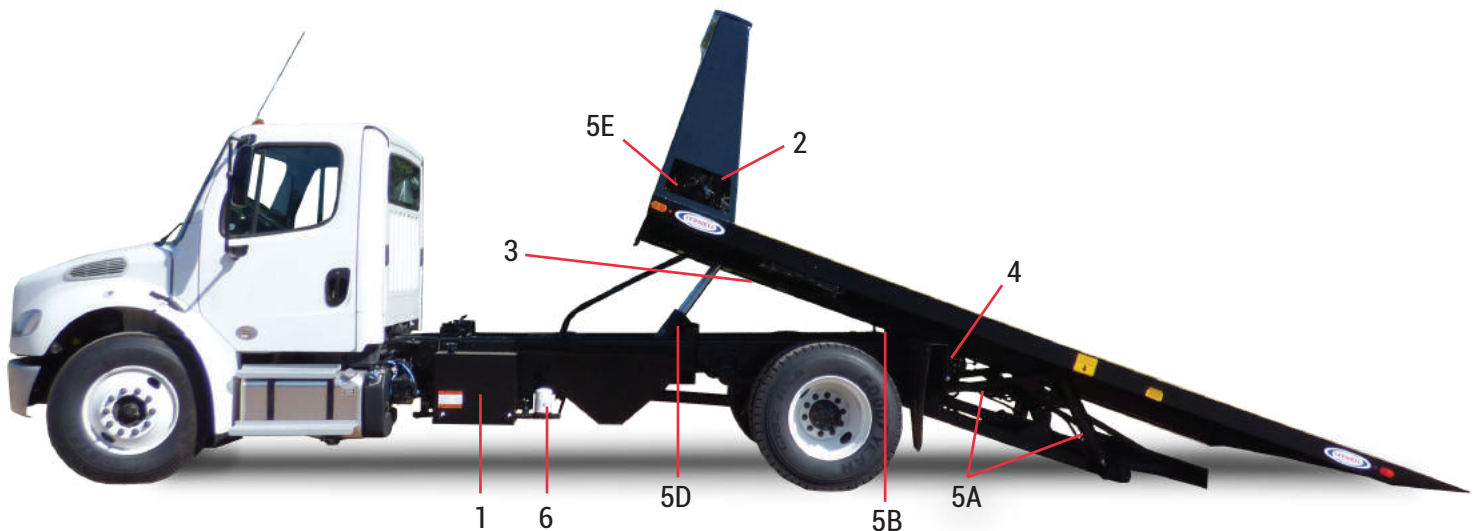

1. Check the hydraulic system for leaks and oil level in the reservoir.
2. Check winch cable for wear and tightness. Frayed cables can be dangerous.
3. Clean dirt from the I-beam and nylatron pads where they slide together and lightly grease.
4. Clean off the valve spools and oil lightly.
5. Grease fittings as necessary with GL2 marine based grease. Grease fittings are as follows:
  - A. Upper & Lower arm pivot bushings – 2 of each & Stabilizer cylinder bushing - 4
  - B. Slide blocks – 4
  - C. Rollback cylinder brackets (under bed) – 2
  - D. Tilt cylinder bushings – 4
  - E. Winch – 2
6. Change hydraulic oil filters twice a year and change hydraulic oil at least once a year.



3300 Waco Street, Texarkana, TX 75501  
888-LEDWELL | 903.838.6531  
ledwell.com | service@ledwell.com

Not just well made, **LEDWELL MADE.**

